


USB 2.0 Host Link Installation Step :

Steps By Steps to Install M5632 HOST LINK 【For Win98SE/ME/2K/XP】


USB 2.0 USB Host Link driver v.1.20 support on Windows 2000,98,ME and XP.

Step1 : Inset the CD driver to CD-ROM


Step2 : Double click “Setup.exe”

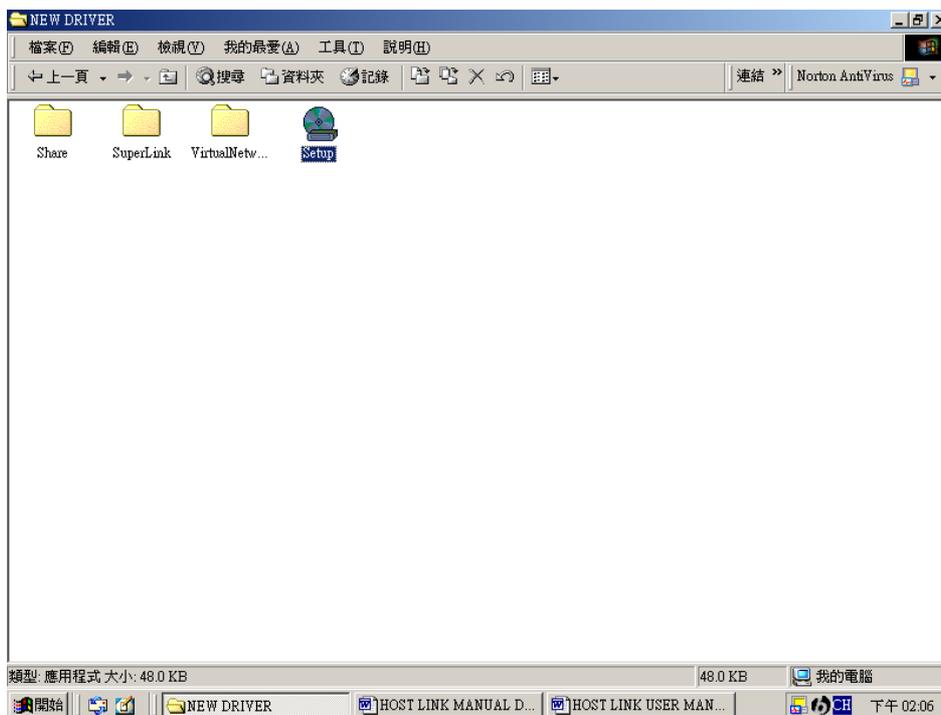


Step3 : Language choose than” choose click “Next”

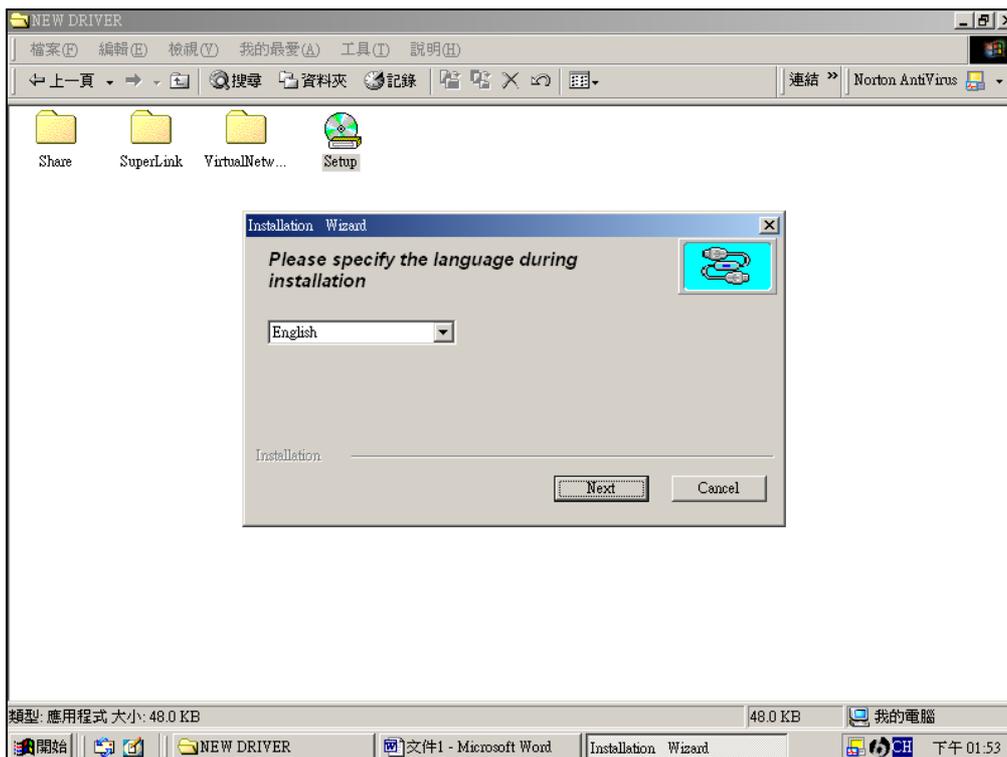


Step4 : Available Type “USB Super Link Adapter”, choose click “Next”

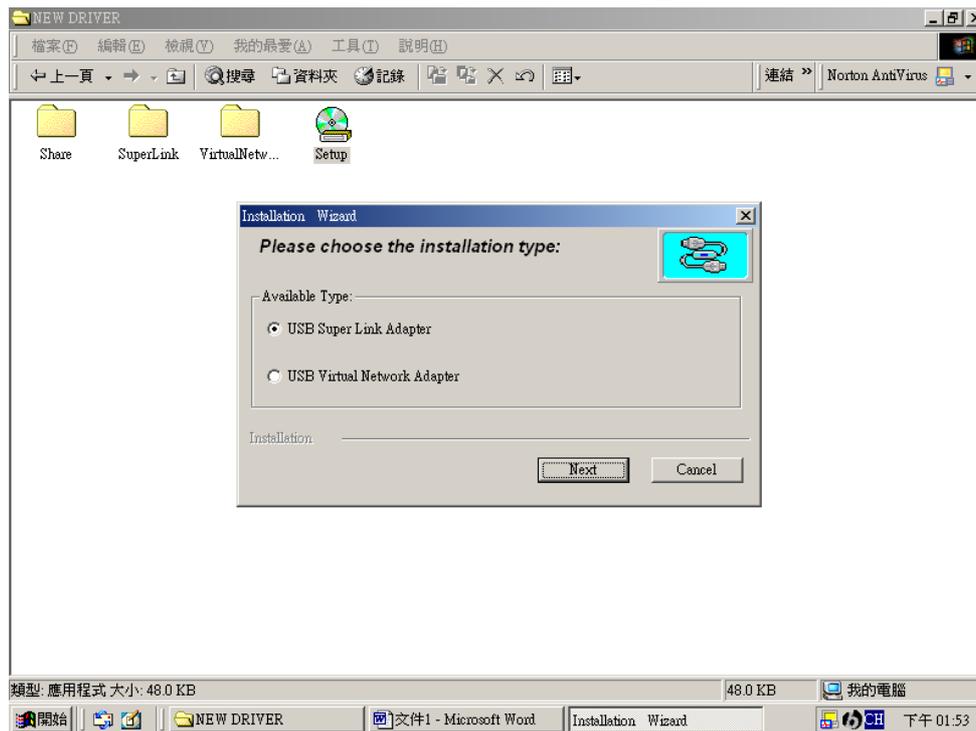

Step5 : Choose click “Next”

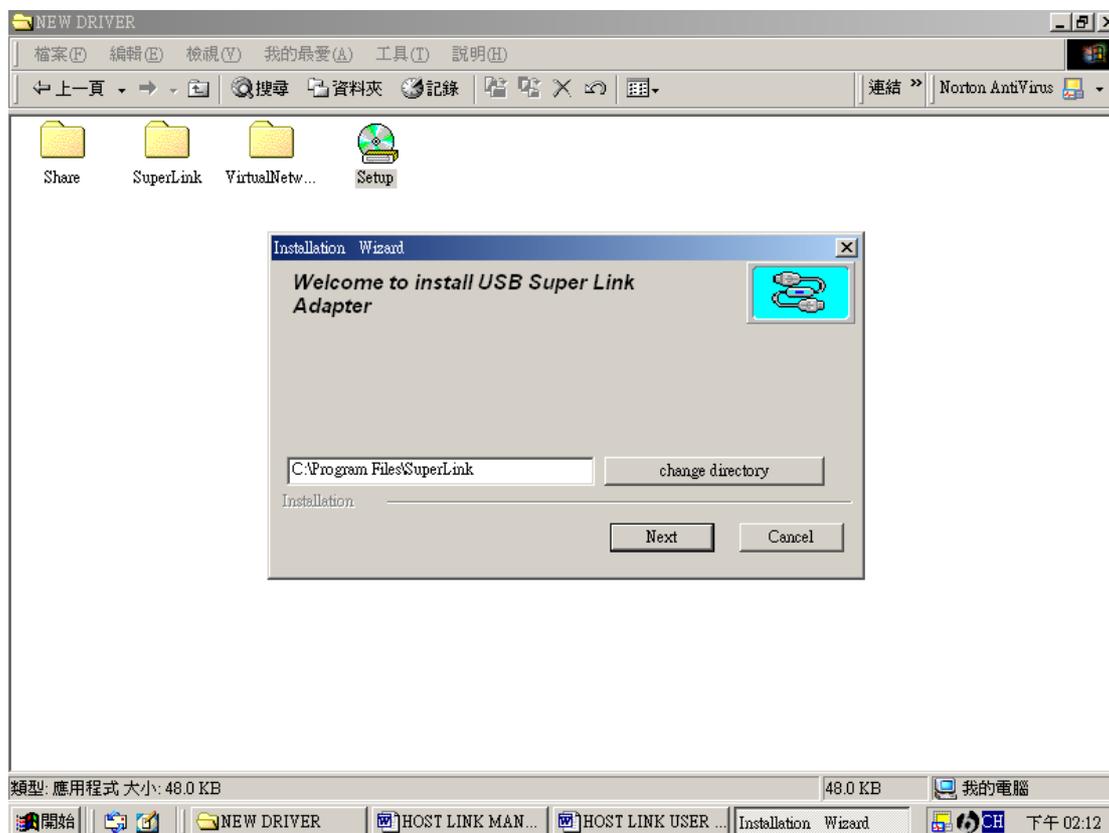

Step6 : The driver has been setup successfully. Choose click “**Finish**”.

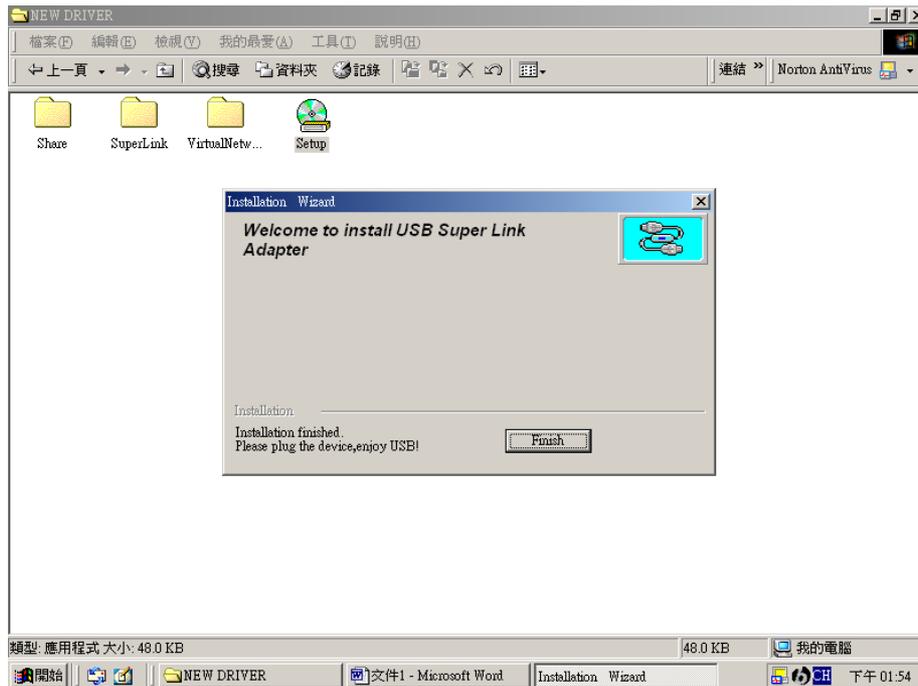

Step7 : After installation is complete, a shortcut of the **SuperLink** will be placed on your Windows desktop.




program

Step8 : Plug in both ends of the **Host Link** USB cable to the two computers.

Step9 : Double-click on the **SuperLink** shortcut icon on your desktop screen. Do the same for the other computer.

Step10 : The **SuperLink** File Manager will appear on your screen and will detect both the local and remote machine. This is much similar with Windows Explorer file.

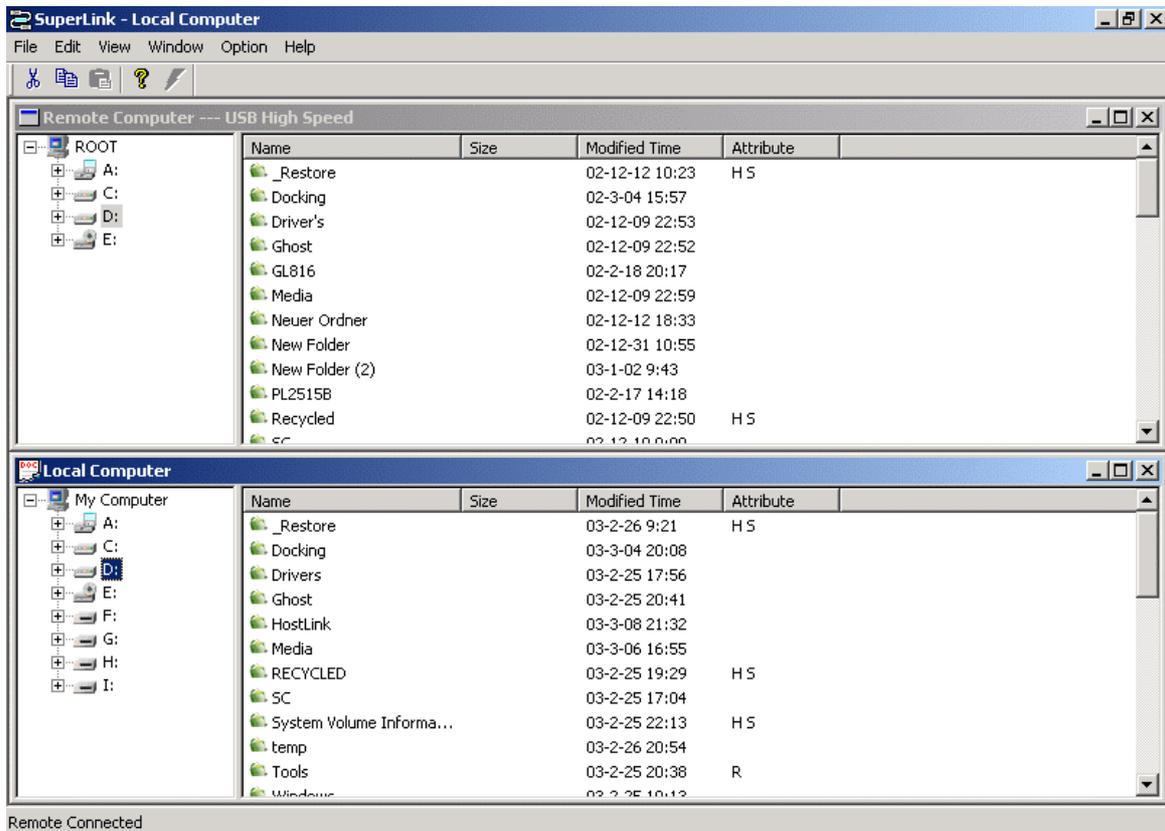

Step11 : Manager where you can cut, copy, paste, or drag files and folders.

Step12 : You can also print text or document files from the remote machine to your local printer by clicking on the file and run File-Print command.